

DT8016MF24 DUAL TEC® Motion Sensor – Installation Instructions

QUICK LINKS

[Mounting Location Guidelines](#)

[Open the Sensor](#)

[Mount the Sensor](#)

[Sensor Components and Settings](#)

[Wire the Sensor](#)

[Wiring Examples](#)

[Walk Test the Sensor](#)

[Detection Patterns](#)

[Remote LED Enable](#)

[Relay Operation](#)


[Troubleshooting](#)

[Sensor Specifications](#)

[Accessories](#)

[Approval Listings](#)

1 SELECT THE MOUNTING LOCATION

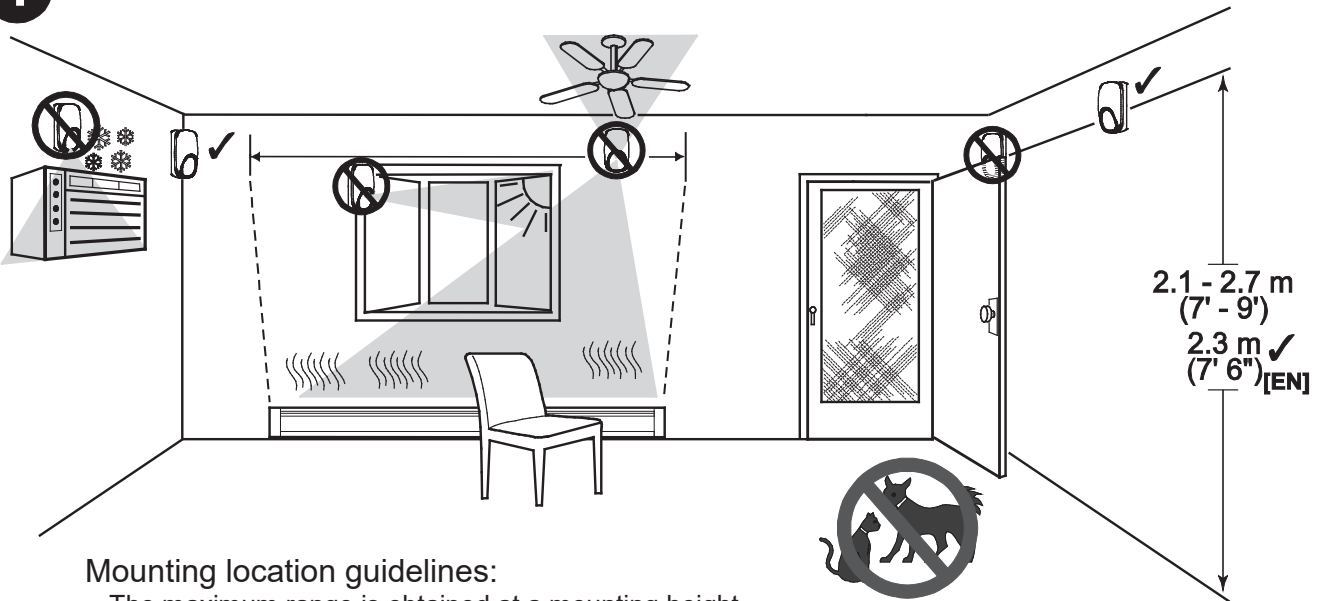


Mounting location guidelines:

- The maximum range is obtained at a mounting height of 2.3m (7' 6").
- Allow a clear line-of-sight to all areas to protect.
- Do not directly face windows.
- Avoid close proximity to moving machinery, fluorescent lights, and heating/cooling sources.
- Not for use in applications with pets.

[EN] = approved installation.




2 OPEN THE SENSOR

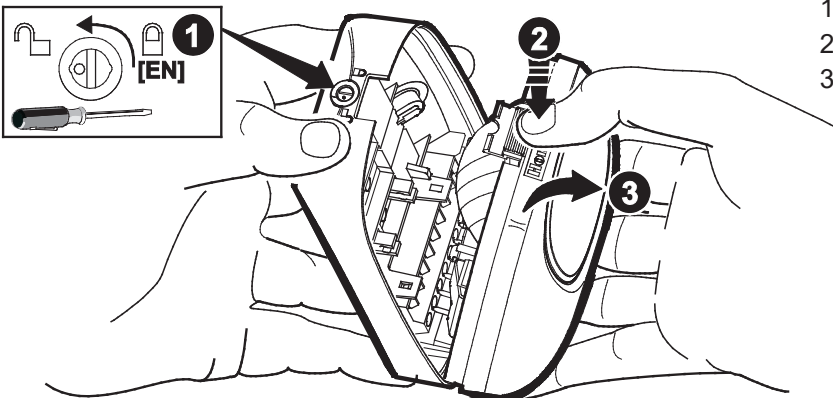


1. Turn the arrow to point to the Unlock symbol.
2. Press firmly on housing latch.
3. Gently separate the front and rear housing.




3 MOUNT THE SENSOR

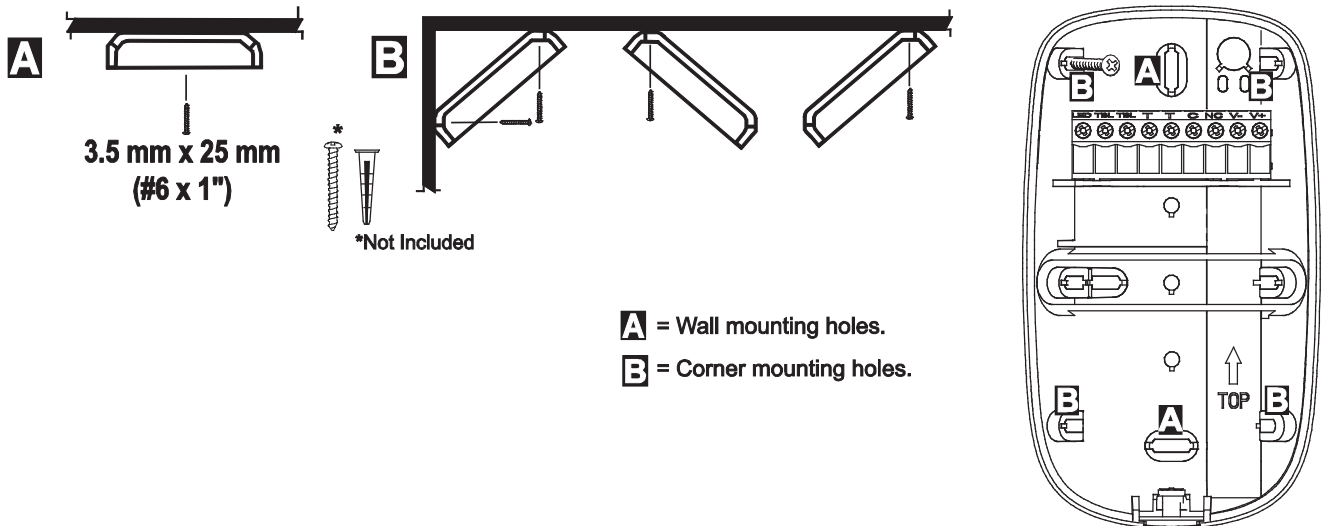

4 SENSOR COMPONENTS AND SETTINGS

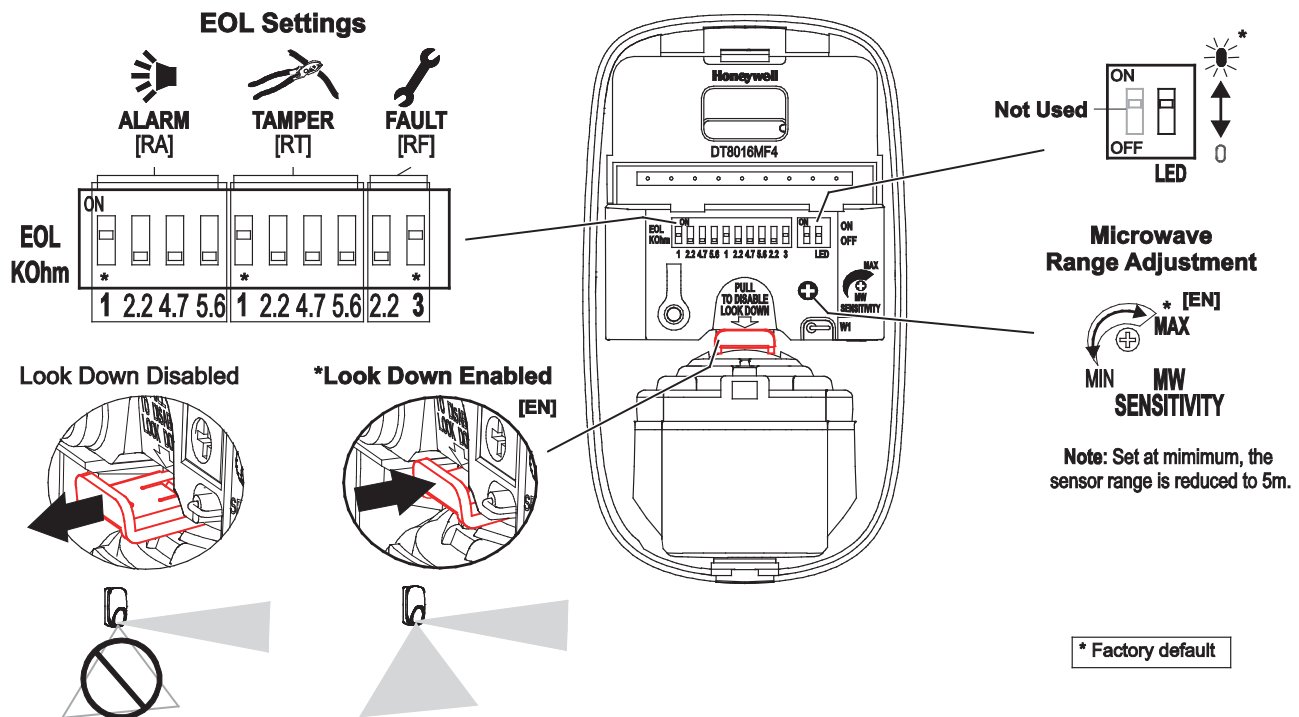

5 WIRE THE SENSOR

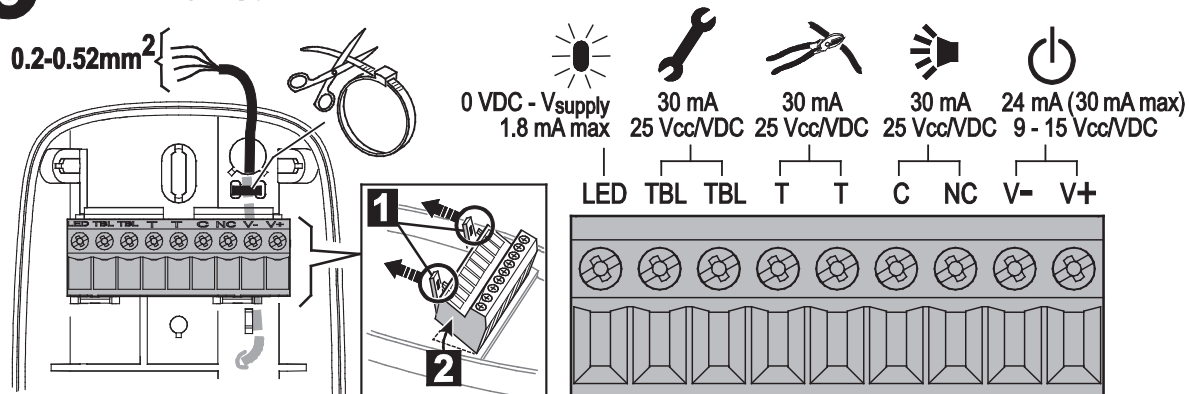


See wiring details and examples on page 3.

- Observe proper polarity.
- If not using the integrated EOL resistors, set all switches to OFF.
- If using the integrated EOL resistors:
 1. Connect the sensor to the panel (see wiring diagrams below).
 2. Set the appropriate tamper [RT], alarm [RA] and trouble [RF] DIP switches to ON (see [Step 4](#) on page 2).


- Consult the Control Panel manual to determine proper EOL selection.
- The Alarm, Tamper and Trouble EOL settings must each only have one switch ON.
- The EOL values should be set at the same time.

Wiring Examples

Alarm, Tamper and Trouble configured to one loop.

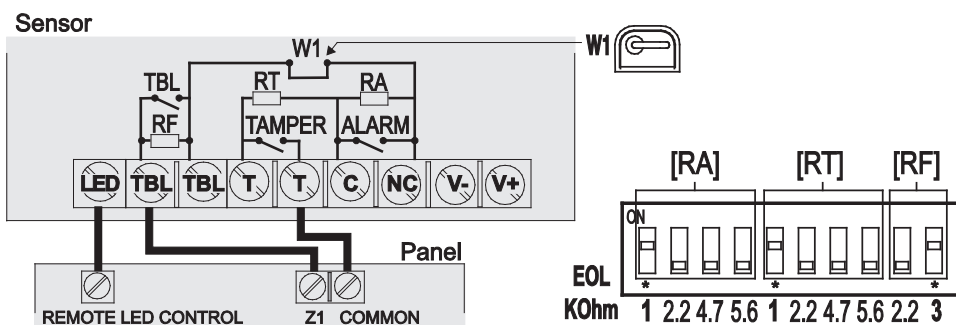


Alarm, Tamper and Trouble configured to two loops.

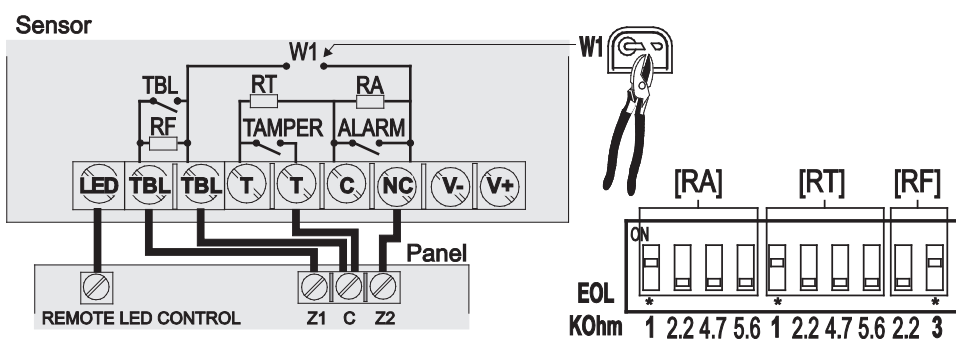


RA = Alarm EOL resistor	RF = Trouble EOL resistor
RT = Tamper EOL resistor	W1 = 1 and 2 loop connection resistor.

6 WALK TEST THE SENSOR AND ADJUST AS NEEDED

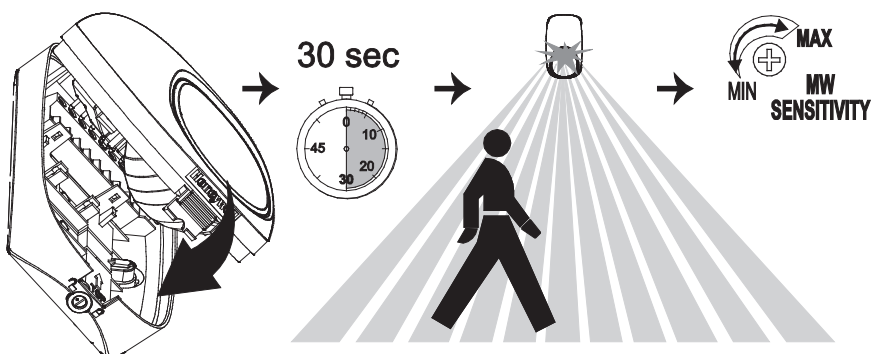

1. Close the sensor and apply power to the sensor. Initialization is complete when the LED stops flashing slowly (about 30 seconds).
2. Walk through the detection area and observe the LED.
3. Adjust the microwave range as necessary to meet installation requirements.

Walk test mode is active for 10 minutes, then automatically exits test mode, disables the LED and enters normal operation mode. For an additional 10 minute walk test, enable walk test mode again with the **flashlight feature** (see the following page).

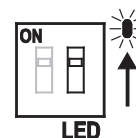


LED	Power Up	Walk Test [10 min.]	Normal	Fault
Red	Slow Blink	ON Alarm	ON Alarm	Fast Blink
Yellow	OFF	ON Microwave	OFF	OFF
Green	OFF	ON PIR	OFF	OFF

- During power up and walk test modes the LED is active regardless of the **LED Enable/Disable DIP switch** setting.
- When the **microwave sensitivity** is set to minimum, the sensor range is reduced to 5m.

Flashlight Feature:

- 1. Use a flashlight with a bright light beam, and stand within 1.2 m (4') of the sensor.
- 2. Swing the light beam past the sensor IR window 3-5 times, holding the beam on the window for 0.5 second each pass.


The flashlight feature is only available for the first 24 hours after the first power up.

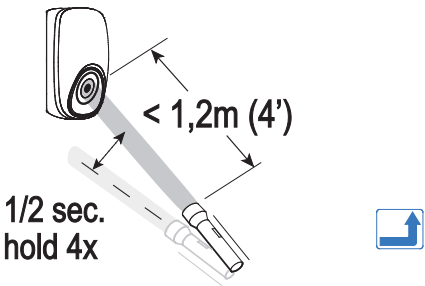


7 DETECTION PATTERNS

Top View

PLAN VIEW
ALL ZONES

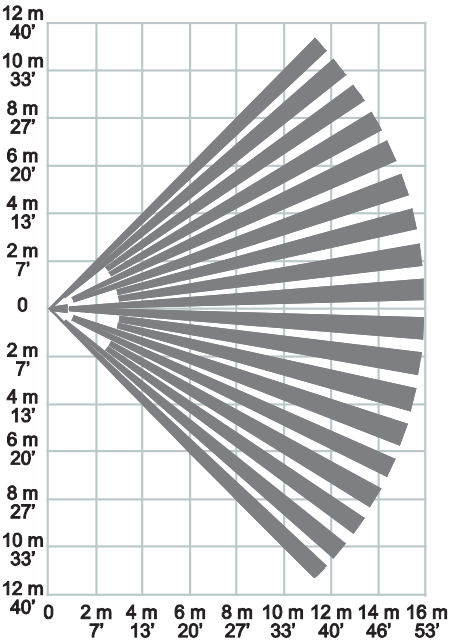

Side View

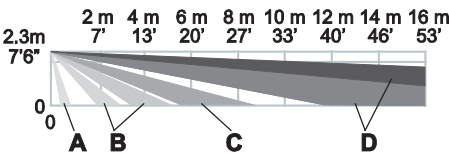


Zones

A	2 Look-down
B	12 Lower
C	10 Intermediate
D	36 Long

REMOTE LED ENABLE (LED INPUT)

The LED input terminal allows the LED to be remotely enabled. To use this feature, the LED DIP switch (switch 2) must be OFF, allowing the LED to operate based on the voltage level connected to the LED Input (see [Wiring Details](#)).



Switch 2	LED Input	LED Operation
OFF	High (+12 V)	Enabled
OFF	Low (0 V)	Disabled
ON	Low (0 V) or High (+12 V)	Enabled

RELAY OPERATION

	SENSOR STATUS		
	Normal	Intrusion	Trouble ¹
Alarm Relay	Closed	Open	Closed
Trouble Relay ²	Closed	Closed	Open

¹ For information on Trouble conditions, see the [Troubleshooting](#) section.
² In a Trouble condition, the Trouble relay will latch open until the Trouble condition has been cleared.

TROUBLESHOOTING

	NORMAL	TROUBLE*	
		Low Voltage ¹	Self-Test Failure ²
Alarm Relay	Closed	Closed	Closed
Trouble Relay	Closed	Open	Open
Red LED	Off	Flashing	Flashing
Yellow LED	Off	Off	Off

***TROUBLE CONDITIONS:**
¹ Low Voltage: The sensor is disabled.
² Self-Test Failure conditions:
• Microwave supervision failure: The sensor is operating in PIR mode only.
• PIR self-test failure: The sensor is disabled.
• Temperature compensation failure: The temperature compensation is disabled.
Depending on the Trouble condition, take the following corrective actions:
• Verify the power supply is sufficient (at least 9V at the sensor).
• Cycle power to the sensor.
• [Walk test](#) the sensor.
If the Trouble condition does not clear, replace the sensor.

SPECIFICATIONS

Range: 16 m x 22 m

Power: 9.0 - 15 VDC; 24mA typical, 30 mA maximum, 12 VDC;
AC Ripple: 3 V peak-to-peak at nominal 12 VDC

Alarm Relay: Energized Form A; 30 mA, 25 VDC, 22 Ohms
resistance maximum. Alarm Relay Duration: 3 seconds

Trouble Relay: Energized Form B; (NC) 30 mA, 25 VDC; 22 Ohms
resistance maximum

Tamper: Cover; (NC with cover installed) Form A;
30 mA, 25 VDC; Magnetic Field

Microwave Frequencies: DT8016MF24 - 24.200 GHz

RFI Immunity: 15 V/m, 80 MHz – 2.7 GHz

PIR White Light Immunity: 10,000 Lux typical

Fluorescent light filter: 50 Hz / 60 Hz.

Operating Temperature: -10° to 55° C

Relative Humidity: 5 to 95%; non-condensing

Temperature Compensation: Advanced Dual Slope

Dimensions: 11.86 cm H x 6.73 cm W x 4.64 cm D

Weight: 137.2g / 4.84 oz (net weight)

ACCESSORIES



SMB-10 (P/N 0-000-110-01)	Swivel Mount Bracket
SMB-10C (P/N 0-000-111-01)	Swivel Mount Ceiling Bracket
SMB-10T (P/N 0-000-155-01)	Swivel Mount Bracket w/Tamper

Note : The accessories are not covered by certifications.

APPROVAL LISTINGS



EN50131-2-4, Security Grade 2,
Environmental Class II.
Suitable for connection to an EN 60950 Class
II Limited Power Source.

Note: In EN 50131-2-4 compliant installations, mount the sensor at 2.3m,
enable look down, set the microwave sensitivity to maximum and lock
the sensor housing with the cover lock (see "[EN]" where noted in
Steps 1-4).

IMPORTANT: The sensor should be tested at least once each year.



NF&A2P 2 boucliers (référentiel NF324-H58) et
conforme aux normes EN50131-2-4 et
RTC50131-2-4; IP30 IK04

DT8016MF24 – N° de certificat: XXXXXXXXXX



AT86

Organisme de certification:
CNPP Cert. : www.cnpp.com et
AFNOR Cert.: www.marque-nf.com

Honeywell Security Group - BP1219
1198 avenue du docteur Maurice Donat
Sophia Antipolis
06254 Mougins Cedex.
TEL: +33.4.92.94.29.50
FAX: +33.4.92.94.29.60

DT8016MF24

INCERT X-XXX-XXXX



For any additional information, please refer to our Website:
<http://www.honeywell.com/security/emea/hscdownload>

Or contact:

Honeywell Security Group
Newhouse Industrial Estate
Motherwell
Lanarkshire ML1 5SB
United Kingdom

Tel: +44(0)1698 738200
Email: UK64Sales@Honeywell.com



Please contact your local authorised Honeywell representative for product warranty information.